

# Operation Guide 3476

ENGLISH

You can also find information about operational procedures at the CASIO website.

<https://support.casio.com/global/en/wat/model/3476/>



EN-1

## About This Manual



• Depending on the model of your watch, display text appears either as dark figures on a light background, or light figures on a dark background. All sample displays in this manual are shown using dark figures on a light background.



- Button operations are indicated using the letters shown in the illustration.
- Each section of this manual provides you with the information you need to perform operations in each mode. Further details and technical information can be found in the "Reference" section.

EN-2

## Contents

Watch Features.....	EN-6
Selecting a Mode.....	EN-8
Radio-controlled Atomic Timekeeping .....	EN-10
World Time.....	EN-31
Timer.....	EN-33
Stopwatch .....	EN-35
Alarm .....	EN-37
Timekeeping .....	EN-40
Reference .....	EN-49
Specifications .....	EN-57

EN-3

## Procedure Lookup

The following is a handy reference list of all the operational procedures contained in this manual.

To specify your Home City.....	EN-12
To perform manual receive .....	EN-26
To turn auto receive on and off.....	EN-27
To display the Last Signal screen.....	EN-28
To view the time in another city.....	EN-31
To toggle a city code time between Standard Time and Daylight Saving Time.....	EN-32
To set the countdown start time .....	EN-33
To use the timer.....	EN-34
To measure times with the stopwatch.....	EN-36
To set the alarm time.....	EN-38
To test the alarm .....	EN-39

EN-4

To turn the daily alarm and the Hourly Time Signal on and off.....	EN-39
To set the time and date.....	EN-42
To change the Daylight Saving Time (summer time) setting .....	EN-48
To turn off Auto Display.....	EN-49
To turn on Auto Display .....	EN-49
To turn the button operation tone on and off .....	EN-50

EN-5

## Watch Features

- ◆ **Accurate timekeeping**  
Receive time signals that are used to correct time settings and ensure timekeeping accuracy.
- ◆ **World Time**  
Display the current time in any one of 48 cities around the globe.
- ◆ **Timer**
- ◆ **Stopwatch**
- ◆ **Alarm**

You can also find information about operational procedures at the CASIO website.




<https://support.casio.com/global/en/wat/model/3476/>

EN-6

EN-7

## Selecting a Mode

- Press (C) to change from mode to mode.
- In any mode (except when a setting screen is on the display), press (B) to illuminate the display.

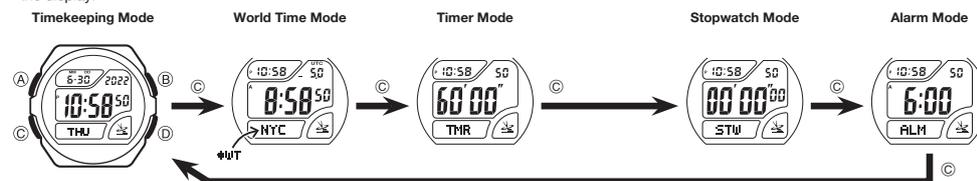

EN-8


You can also find information about operational procedures at the CASIO website.



<https://support.casio.com/global/en/wat/model/3476/>

EN-9

## Radio-controlled Atomic Timekeeping

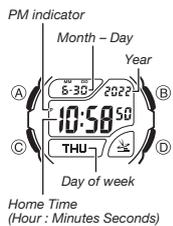

This watch receives a time calibration signal and updates its time setting accordingly.

- Supported time calibration signals: Germany (Mainflingen), England (Anthorn), United States (Fort Collins), Japan.
- See the information under "Signal Reception Troubleshooting" (page EN-29) if you experience problems with time calibration signal reception.

### Current Time Setting

This watch adjusts its time setting automatically in accordance with a time calibration signal. You can also perform a manual procedure to set the time and date, when necessary.

- The first thing you should do after purchasing this watch is to specify your Home City (the city where you normally will use the watch). For more information, see "To specify your Home City" (page EN-12).
- When using the watch outside the areas covered by the time signal transmitters, you will have to adjust the current time setting manually as required. See "Timekeeping" (page EN-40) for more information about manual time settings.
- The U.S. time calibration signal can be picked up by the watch while in North America. The term "North America" in this manual refers to the area that consists of Canada, the continental United States, and Mexico.

EN-10

EN-11

## To specify your Home City



- In the Timekeeping Mode, hold down (A) until the city code starts to flash, which indicates the setting screen.
  - Press (B) (west) and (D) (east) to select the city code you want to use as your Home City.
- Time calibration signal reception is supported when any one of the city codes shown in the table below is selected as your Home City.

German/U.K. Signal				Japan Signal		U.S. Signal			
City Code	City Name	City Code	City Name	City Code	City Name	City Code	City Name	City Code	City Name
LIS	Lisbon	ATH	Athens	HKG	Hong Kong	HNL	Honolulu	YWG	Winnipeg
LON	London	MOW	Moscow	BJS	Beijing	ANC	Anchorage	CHI	Chicago
MAD	Madrid			TPE	Taipei	YVR	Vancouver	MIA	Miami
PAR	Paris			SEL	Seoul	LAX	Los Angeles	YTO	Toronto
ROM	Rome			TYO	Tokyo	YEA	Edmonton	NYC	New York
BER	Berlin					DEN	Denver	YHZ	Halifax
STO	Stockholm					MEX	Mexico City	YYT	St. Johns

- Press (A) to exit the setting screen.

EN-12

EN-13

## Important!

- Normally, your watch should show the correct time as soon as you select your Home City code. If it does not, it should adjust automatically after the next auto receive operation (in the middle of the night). You can also perform manual receive (page EN-26) or you can set the time manually (page EN-42).
- The watch will receive the time calibration signal automatically from the applicable transmitter (in the middle of the night) and update its settings accordingly. For information about the relationship between city codes and transmitters, see "Home City Codes and Transmitters" (page EN-18).
- Under factory default settings, auto receive is turned off for all of the following city codes: HNL (Honolulu), ANC (Anchorage), MOW (Moscow), HKG (Hong Kong), and BJS (Beijing). For details about turning on auto receive for these city codes, see "To turn auto receive on and off" on page EN-27.
- You can disable time signal reception, if you want. See "To turn auto receive on and off" on page EN-27 for more information.
- See the maps under "Approximate Reception Ranges" (page EN-19) for information about the reception ranges of the watch.

- If you are in an area that does not use Daylight Saving Time (summer time), turn off the DST setting (page EN-48).

### Time Calibration Signal Reception

There are two different methods you can use to receive the time calibration signal: auto receive and manual receive.

#### Auto Receive

With auto receive, the watch receives the time calibration signal automatically up to six times a day. When any auto receive is successful, the remaining auto receive operations are not performed. For more information, see "About Auto Receive" (page EN-20).

#### Manual Receive


Manual receive lets you start a time calibration receive operation with the press of a button. For more information, see "To perform manual receive" (page EN-26).

EN-14

EN-15

## Important!

- When getting ready to receive the time calibration signal, position the watch as shown in the nearby illustration, with its 12 o'clock side facing towards a window. This watch is designed to receive a time calibration signal late at night. Because of this, you should place the watch near a window as shown in the illustration when you take it off at night. Make sure there are no metal objects nearby.

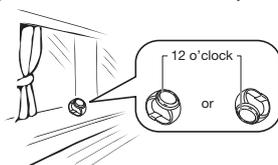

- Make sure the watch is facing the right way.

EN-16

- Proper signal reception can be difficult or even impossible under the conditions listed below.



- Inside or among buildings
- Inside a vehicle
- Near household appliances, office equipment, or a mobile phone
- Near a construction site, airport, or other sources of electrical noise
- Near high-tension power lines
- Among or behind mountains

- Signal reception normally is better at night than during the day.
- Time calibration signal reception takes from two to ten minutes, but in some cases it can take as long as 20 minutes. Take care that you do not perform any button operations or move the watch during this time.

EN-17

- The time calibration signal the watch will attempt to pick up depends on its current Home City code setting as shown below. If you use the watch in Japan or Europe (each of which has two different transmitter locations), it will try to receive the time calibration signal from one of the transmitters in your current location. If it cannot receive the signal, it will then try to receive the time calibration signal from the other transmitter.


### Home City Codes and Transmitters

Home City Code	Transmitter	Frequency
LIS, LON, MAD, PAR, ROM, BER, STO, ATH, MOW*	Anthorn (England) Mainflingen (Germany)	60.0 kHz 77.5 kHz
HKG*, BJS*, TPE, SEL, TYO	Fukushima (Japan) Fukuoka/Saga (Japan)	40.0 kHz 60.0 kHz
HNL*, ANC*, YVR, LAX, YEA, DEN, MEX, YWG, CHI, MIA, YTO, NYC, YHZ, YYT	Fort Collins, Colorado (the United States)	60.0 kHz

\* The areas covered by the HNL, ANC, MOW, HKG, and BJS city codes are quite far from the time calibration signal transmitters, and so certain conditions may cause problems with signal reception.

EN-18

### Approximate Reception Ranges

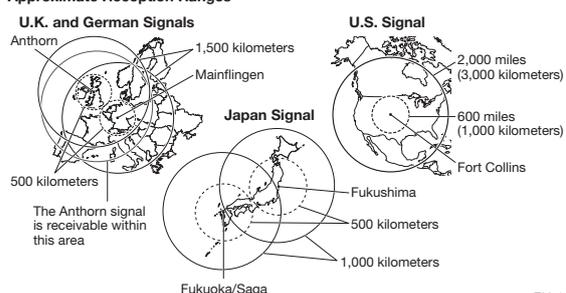

EN-19

- Signal reception may not be possible at the distances noted below during certain times of the year or day. Radio interference may also cause problems with reception.
  - Mainflingen (Germany) or Anthon (England) transmitters: 500 kilometers (310 miles)
  - Fort Collins (United States) transmitter: 600 miles (1,000 kilometers)
  - Fukushima or Fukuoka/Saga (Japan) transmitters: 500 kilometers (310 miles)
- Even when the watch is within the reception range of a transmitter, signal reception may be impossible at times due to the effects of geographic contours, structures, weather, the season of the year, the time of day, radio interference, etc. Note that the signal becomes weaker at distances of approximately 500 kilometers from the transmitter, which means that the influence of the conditions listed above becomes even greater.

### About Auto Receive

The watch receives the time calibration signal automatically up to six times a day. When any auto receive is successful, the remaining auto receive operations are not performed. The reception schedule (calibration times) depends on your currently selected Home City, and whether standard time or Daylight Saving Time is selected for your Home City.

EN-20

Your Home City		Auto Receive Start Times					
		1	2	3	4	5	6
HNL, ANC, YVR, LAX, YEA, DEN, MEX, YWG, CHI, MIA, YTO, NYC, YHZ, YYT	Standard Time						
	Daylight Saving Time	Midnight	1:00 am	2:00 am	3:00 am	4:00 am	5:00 am
LIS, LON	Standard Time	1:00 am	2:00 am	3:00 am	4:00 am	5:00 am	Midnight
	Daylight Saving Time	2:00 am	3:00 am	4:00 am	5:00 am	Midnight	1:00 am
MAD, PAR, ROM, BER, STO	Standard Time	2:00 am	3:00 am	4:00 am	5:00 am	Midnight	1:00 am
	Daylight Saving Time	3:00 am	4:00 am	5:00 am	Midnight	1:00 am	2:00 am

EN-21

Your Home City		Auto Receive Start Times					
		1	2	3	4	5	6
ATH	Standard Time	3:00 am	4:00 am	5:00 am	Midnight	1:00 am	2:00 am
	Daylight Saving Time	4:00 am	5:00 am	Midnight	1:00 am	2:00 am	3:00 am
MOW	Standard Time	4:00 am	5:00 am	Midnight	1:00 am	2:00 am	3:00 am
	Daylight Saving Time	5:00 am	Midnight	1:00 am	2:00 am	3:00 am	4:00 am
HKG, BJS, TPE, SEL, TYO	Standard Time	Midnight	1:00 am	2:00 am	3:00 am	4:00 am	5:00 am

\* Next day

EN-22


### Note

- When a calibration time is reached, the watch will receive the calibration signal only if it is in either the Timekeeping Mode or World Time Mode. Reception is not performed if a calibration time is reached while you are configuring settings.
- Auto receive of the calibration signal is designed to be performed between midnight and 5:00 a.m., while you sleep (provided that the Timekeeping Mode time is set correctly). Before going to bed for the night, remove the watch from your wrist, and put it in a location where it can receive the signal easily.
- The watch receives the calibration signal for two to ten minutes everyday when the time in the Timekeeping Mode reaches each of the calibration times. Avoid performing any button operation within ten minutes before or after any one of the calibration times. Doing so can interfere with correct calibration.
- Remember that reception of the calibration signal depends on the current time in the Timekeeping Mode. The receive operation will be performed whenever the display shows any one of the calibration times, regardless of whether or not the displayed time actually is the correct time.
- Calibration signal reception is disabled while a countdown timer operation is in progress.

EN-23

### About the Receiving Indicator

The receiving indicator shows the strength of the calibration signal being received. For best reception, be sure to keep the watch in a location where signal strength is strongest.

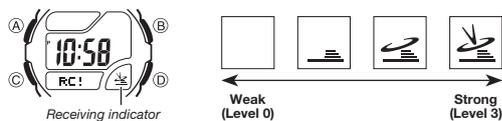

- Even in an area where signal strength is strong, it takes about 10 seconds for signal reception to stabilize enough for the receiving indicator to indicate signal strength.
- Use the receiving indicator as a guide for checking signal strength and for finding the best location for the watch during signal receive operations.

EN-24

- Following reception of the time calibration signal and calibration of the watch's time setting, the Level 3 receiving indicator will remain on the display in all modes. The Level 3 receiving indicator will not be displayed if signal reception was unsuccessful or after you adjust the current time setting manually.
- The Level 3 receiving indicator is displayed only when the watch is able to receive both time and date data successfully. It does not appear when only time data is received.
- The Level 3 receiving indicator indicates that at least one of the auto calibration signal receive operations was successful. Note, however, that the Level 3 receiving indicator is cleared from the display when the first auto receive operation of the day is performed.

EN-25

### To perform manual receive

- Place the watch on a stable surface so its top (12 o'clock side) is facing towards a window (page EN-16).
- In the Timekeeping Mode, hold down (D) for about two seconds until RC! appears on the display.
- Time calibration signal reception takes from two to ten minutes, but in some cases it can take as long as 20 minutes. Take care that you do not perform any button operations or move the watch during this time.
- After signal reception is complete, the display of the watch changes to the Last Signal screen (page EN-28).

### Note

- To interrupt a receive operation and return to the Timekeeping Mode, press (D).
- If the receive operation is unsuccessful, the message ERR appears on the display for about one or two minutes. After that, the watch returns to the Timekeeping Mode.

EN-26

- You can also change from the Last Signal or ERR screen to the normal timekeeping screen by pressing (D).
- Calibration signal reception is disabled while a countdown timer operation is in progress.


### To turn auto receive on and off

- In the Timekeeping Mode, press (D) to display the Last Signal screen (page EN-28).
- Hold down (A) until the receiving indicator and current auto receive setting (ON or OFF) start to flash. This is the setting screen.
  - Note that the setting screen will not appear if the currently selected Home City is one that does not support time calibration reception.
- Press (D) to toggle auto receive on (ON) and off (OFF).
- Press (A) to exit the setting screen.
- For information about city codes that support signal receive, see "To specify your Home City" (page EN-12).

EN-27

### To display the Last Signal screen

In the Timekeeping Mode, press (D) to display the Last Signal screen (indicated by GET). The Last Signal screen shows the date and time of the last successful time calibration signal reception.

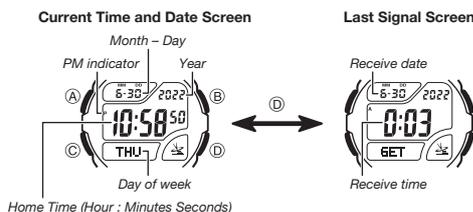

EN-28

### Signal Reception Troubleshooting

Check the following points whenever you experience problems with calibration signal reception.

Problem	Probable Cause	What you should do
Cannot perform manual receive.	<ul style="list-style-type: none"> <li>The watch is not in the Timekeeping Mode.</li> <li>Your current Home City is not one of the following city codes: HNL, ANC, YVR, LAX, YEA, DEN, MEX, YWG, CHI, MIA, YTO, NYC, YHZ, YYT, LIS, LON, MAD, PAR, ROM, BER, STO, ATH, MOW, HKG, BJS, TPE, SEL, and TYO.</li> <li>The countdown timer is running.</li> </ul>	<ul style="list-style-type: none"> <li>Enter the Timekeeping Mode and try again (page EN-26).</li> <li>Select one of the cities to the left as your Home City (page EN-12).</li> <li>Stop the countdown timer (page EN-34) and try again.</li> </ul>
Auto receive is turned on, but the Level 3 receiving indicator does not appear on the display.	<ul style="list-style-type: none"> <li>You changed the time setting manually.</li> <li>The watch was not in the Timekeeping or World Time Mode, or you performed some button operation during the auto receive operation.</li> </ul>	<ul style="list-style-type: none"> <li>Perform manual signal receive or wait until the next auto signal receive operation is performed.</li> </ul>

EN-29

Problem	Probable Cause	What you should do
Auto receive is turned on, but the Level 3 receiving indicator does not appear on the display.	<ul style="list-style-type: none"> <li>Even if receive is successful, the Level 3 receiving indicator disappears every day when the first auto receive operation of the day is performed.</li> <li>Time data (hour, minutes, seconds) only was received during the last receive operation. The Level 3 receiving indicator appears only when time data and date data (year, month, day) are both received.</li> </ul>	<ul style="list-style-type: none"> <li>Perform manual signal receive or wait until the next auto signal receive operation is performed.</li> <li>Check to make sure the watch is in a location where it can receive the signal (page EN-16).</li> </ul>
Time setting is incorrect following signal reception.	<ul style="list-style-type: none"> <li>If the time is one hour off, the DST setting may be incorrect.</li> <li>The Home City code setting is not correct for the area where you are using the watch.</li> </ul>	<ul style="list-style-type: none"> <li>Change the DST setting to Auto DST (page EN-48).</li> <li>Select the correct Home City code (page EN-12).</li> </ul>

• For further information, see "Important!" (page EN-16) and "Radio-controlled Atomic Timekeeping Precautions" (page EN-52).

EN-30

EN-31


### To toggle a city code time between Standard Time and Daylight Saving Time



- In the World Time Mode, use (D) to display the city code (time zone) whose Standard Time/Daylight Saving Time setting you want to change.
- Hold down (A) to toggle Daylight Saving Time (DST indicator displayed) and Standard Time (DST indicator not displayed).
  - The DST indicator will appear whenever you display a city code for which Daylight Saving Time is turned on.
  - Note that the DST/Standard Time setting affects only the currently displayed city code. Other city codes are not affected.
  - Enabling summer time for the city you have specified as your Home City also enables summer time for your home time (normal timekeeping).

EN-32

### World Time

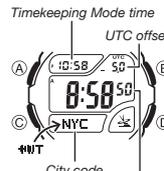


The World Time Mode shows you the current time in 48 cities (29 time zones) around the world.

- If the current time shown for a city is wrong, check your Home City time settings and make the necessary changes (page EN-12).
- All of the operations in this section are performed in the World Time Mode, which you enter by pressing (C) (page EN-8).

**To view the time in another city**  
While in the World Time Mode, press (D) to scroll eastward through the city codes (time zones).

- For full information on city codes, see the "City Table" at the back of this manual.

### Timer

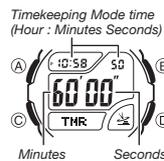

You can set the countdown timer within a range of one to 60 minutes. An alarm sounds when the countdown reaches zero.

- All of the operations in this section are performed in the Timer Mode, which you enter by pressing (C) (page EN-8).

**To set the countdown start time**

- While the countdown start time is on the display in the Timer Mode, hold down (A) until the current countdown start time starts to flash, which indicates the setting screen.
  - If the countdown start time is not displayed, use the procedure under "To use the timer" to display it.
- While a setting is flashing, use (B) (-) and (D) (+) to change it.
- Press (A) to exit the setting screen.

EN-33


### To use the timer

Press (D) while in the Timer Mode to start the countdown timer.

- When the end of the countdown is reached, the alarm sounds for 10 seconds or until you stop it by pressing any button. The countdown time is reset automatically to its starting value after the alarm stops.
- Press (C) while a countdown operation is in progress to pause it. Press (D) again to resume the countdown.
- To stop a countdown operation completely, first pause it (by pressing (D)), and then press (A). This returns the countdown time to its starting value.
- Calibration signal reception is disabled while a countdown timer operation is in progress.

EN-34

### Stopwatch

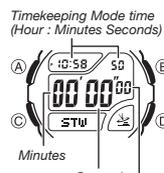

The stopwatch lets you measure elapsed time, split times, and two finishes.

- The display range of the stopwatch is 59 minutes, 59.99 seconds.
- The stopwatch continues to run, restarting from zero after it reaches its limit, until you stop it.
- Exiting the Stopwatch Mode while a split time is frozen on the display clears the split time and returns to elapsed time measurement.
- The stopwatch measurement operation continues even if you exit the Stopwatch Mode.
- All of the operations in this section are performed in the Stopwatch Mode, which you enter by pressing (C) (page EN-9).

EN-35

### To measure times with the stopwatch

**Elapsed Time**

(D) Start → (D) Stop → (D) Re-start → (A) Stop → (A) Clear

**Split Time**

(D) Start → (A) Split (SPL displayed) → (A) Split release → (D) Stop → (A) Clear

**Two Finishes**

(D) Start → (A) Split (First runner finishes. Display time of first runner.) → (D) Stop (Second runner finishes.) → (A) Split release (Display time of second runner.) → (A) Clear

EN-36

EN-37

### To set the alarm time




- In the Alarm Mode, hold down (A) until the hour setting of the alarm time starts to flash, which indicates the setting screen.
  - This automatically turns on the alarm.
- Press (C) to move the flashing between the hour and minute settings.
- While a setting is flashing, use (B) (-) and (D) (+) to change it.
  - When setting the alarm time using the 12-hour format, take care to set the time correctly as a.m. (A indicator) or p.m. (P indicator).
- Press (A) to exit the setting screen.

### Alarm Operation

The alarm sounds at the preset time for about 10 seconds (in all modes), or until you stop it by pressing any button.

EN-38

### Alarm

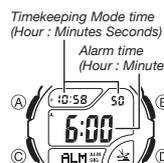

After you set (and turn on) the daily alarm, the alarm tone sounds when the alarm time is reached. You can also turn on an Hourly Time Signal that causes the watch to beep for about one second every hour on the hour.


- All of the operations in this section are performed in the Alarm Mode, which you enter by pressing (C) (page EN-9).

Alarm on indicator  
Hourly time signal on indicator

### To test the alarm

In the Alarm Mode, hold down (D) to sound the alarm.

**To turn the daily alarm and the Hourly Time Signal on and off**  
In the Alarm Mode, press (D) to cycle through the settings shown below.




• The alarm on indicator and the Hourly Time Signal on indicator are shown on the display in all modes while these functions are turned on.

EN-39

## Timekeeping

Use the Timekeeping Mode to set and view the current time and date.

- When setting the time, you can also configure settings for the City Code, the DST setting, the 12/24-Hour Format, Year, Month, Day, the Language setting, and the Month/Day display format.
- Pressing **(D)** in the Timekeeping Mode will display the Last Signal screen.

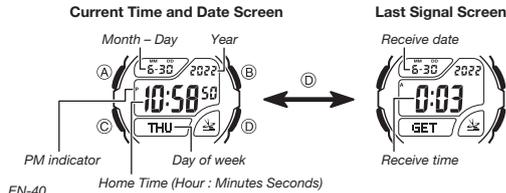

EN-40

EN-41

## Setting the Time and Date

Make sure you select your Home City code before you change the current time and date settings. World Time Mode times are all displayed in accordance with the Timekeeping Mode settings. Because of this, World Time Mode times will not be correct if you do not select the proper Home City code before setting the time and date in the Timekeeping Mode.


### To set the time and date



- In the Timekeeping Mode, hold down **(A)** until the city code starts to flash, which indicates the setting screen.
- Press **(C)** to change the flashing contents in the sequence shown below to select other settings.

## Note

- This watch is capable of displaying text for the day of the week in any one of nine different languages (English, Spanish, French, Portuguese, German, Italian, Chinese, Russian, and Japanese).



- When the setting you want to change is flashing, use **(B)** and/or **(D)** to change it as described below.

Screen:	To do this:	Do this:
TYO	Change the city code	Use <b>(B)</b> (west) and <b>(D)</b> (east).
AUTO	Cycle between auto DST (AUTO), Standard Time (OFF), and Daylight Saving Time (ON)	Press <b>(D)</b> .
12H	Toggle between 12-hour (12H) and 24-hour (24H) timekeeping	Press <b>(D)</b> .
50	Reset the seconds to 00	Press <b>(D)</b> .

EN-42

EN-43

Screen:	To do this:	Do this:
10:58:58 6-30	Change the hour, minutes, or year	Use <b>(B)</b> (-) and <b>(D)</b> (+).
MM DD 6-30	Change the month or day	
ENG	Change the language ENG: English    ESP: Spanish FRA: French    POR: Portuguese DEU: German    ITA: Italian CHN: Chinese    PYC: Russian JPN: Japanese	Use <b>(B)</b> and <b>(D)</b> .
M/D	Toggle the month/day display format between month/day (M/D) and day/month (D/M).	Press <b>(D)</b> .

- See the "City Table" at the back of this manual for a complete list of available city codes.

EN-44

EN-45

## Daylight Saving Time (DST)

Daylight Saving Time (summer time) advances the time setting by one hour from Standard Time. Remember that not all countries or even local areas use Daylight Saving Time.

The time calibration signals transmitted from Mainflingen (Germany), Anthon (England), or Fort Collins (the United States) includes both Standard Time and DST data. When the Auto DST setting is turned on, the watch switches between Standard Time and DST (summer time) automatically in accordance with the received time signal.

The time calibration signals transmitted from Fukushima and Fukuoka/Saga (Japan) do not include summer time data.

- The initial default setting for DST depends on the city you have specified as your Home City.
  - The initial default DST setting is "Auto DST (AUTO)" when you have one of the following cities specified as your Home City: **ANC, YVR, LAX, YEA, DEN, MEX, YWG, CHI, MIA, YTO, NYC, YHZ, YYT, LIS, LON, MAD, PAR, ROM, BER, STO, ATH, MOW, TYO.**


- The initial default DST setting is "DST off (OFF)" when you have one of the following cities specified as your Home City: **HNL, HKG, BJS, TPE, SEL.**
- The initial default DST setting is "DST off (OFF)" when you have a city that does not support time signal reception specified as your Home City.
- If you experience problems receiving the time calibration signal in your area, it probably is best to switch between Standard Time and Daylight Saving Time (summer time) manually.

EN-46

EN-47

### To change the Daylight Saving Time (summer time) setting

- In the Timekeeping Mode, hold down **(A)** until the city code starts to flash, which indicates the setting screen.
- Press **(C)** and the DST setting screen appears.
- Use **(D)** to cycle through the DST settings in the sequence shown below.



- When the setting you want is selected, press **(A)** to exit the setting screen.
- The DST indicator appears to indicate that Daylight Saving Time is turned on.

EN-48

## Reference

This section contains more detailed and technical information about watch operation. It also contains important precautions and notes about the various features and functions of this watch.

### Auto Display

Auto Display continually changes the contents of the digital display.

#### To turn off Auto Display

Press any button to turn off Auto Display. This returns to the Timekeeping Mode.

#### To turn on Auto Display


In the Timekeeping Mode (page EN-8), while holding down **(B)**, hold down **(D)** for about two seconds until the watch beeps.

## Note

- Calibration signal reception is disabled while Auto Display is being performed.
- Auto Display cannot be performed while a setting screen is on the display.

EN-49

## Button Operation Tone

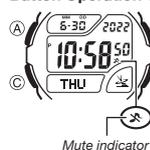

The button operation tone sounds any time you press one of the watch's buttons. You can turn the button operation tone on or off as desired.

- Even if you turn off the button operation tone, the alarm, Hourly Time Signal, and Timer Mode alarm all operate normally.

### To turn the button operation tone on and off

In any mode (except when a setting screen is on the display), hold down (C) to toggle the button operation tone on (🔊 not displayed) and off (🔇 displayed).

- Since the (C) button is also the mode change button, holding it down to turn the button operation tone on or off also causes the watch's current mode to change.
- The mute indicator is displayed in all modes when the button operation tone is turned off.

EN-50

EN-51

## Radio-controlled Atomic Timekeeping Precautions

- Strong electrostatic charge can result in the wrong time being set.
- The time calibration signal is bounced off the ionosphere. Because of this, such factors as changes in the reflectivity of the ionosphere, as well as movement of the ionosphere to higher altitudes due to seasonal atmospheric changes or the time of day may change the reception range of the signal and make reception temporarily impossible.
- Even if the time calibration signal is received properly, certain conditions can cause the time setting to be off by up to one second.
- The current time setting in accordance with the time calibration signal takes priority over any time settings you make.
- The watch is designed to update the date and day of the week automatically for the period January 1, 2000 to December 31, 2099. Setting of the date by a time calibration signal cannot be performed starting from January 1, 2100.
- This watch can receive signals that differentiate between leap years and non-leap years.

EN-52

## Auto Return Features

- If you leave the watch with the Last Signal screen in the Timekeeping Mode for one or two minutes without performing any operation, it returns to the Current Time and Date screen in the Timekeeping Mode automatically.
- If you leave the watch in the Alarm Mode for two or three minutes without performing any operation, it returns to the Timekeeping Mode automatically.
- If you leave the watch with a flashing setting on the display for two or three minutes without performing any operation, the watch exits the setting screen automatically.

## Scrolling

The (B) and (D) buttons are used in various modes and setting screens to scroll through data. In most cases, holding down these buttons during a scroll operation scrolls through the data at high speed.

## Initial Screens

When you enter the World Time or Alarm Mode, the data you were viewing when you last exited the mode appears first.

- Though this watch is designed to receive both time data (hour, minutes, seconds) and date data (year, month, day), certain signal conditions can limit reception to time data only.
- Normally, the signal reception date shown by the Last Signal screen is the date data included in the received time calibration signal. When only time data is received, however, the Last Signal screen shows the date as kept in the Timekeeping Mode at the time of signal reception.
- If you are in an area where proper time calibration signal reception is impossible, the watch keeps time with the precision noted in "Specifications".
- If you have problems with proper time calibration signal reception or if the time setting is wrong after signal reception, check your current city code (page EN-12), DST (summer time) (page EN-48), and auto receive settings (page EN-27). The following are the initial factory defaults for these settings.

Setting	Initial Factory Default
City code	<b>TYO</b> (Tokyo)
DST (summer time)	<b>AUTO</b> (Auto switching)
Auto receive	<b>ON</b> (Auto receive)

EN-53

- The watch's Home City code setting will change automatically to **TYO** (Tokyo) whenever the battery goes dead or is replaced. **TYO** (Tokyo) causes the watch to receive the time calibration signals of Japan. If you are using the watch in North America or Europe, you will need to change the Home City code setting to match your location after having the watch's battery replaced.

## Timekeeping

- The day of the week is displayed automatically in accordance with the date (year, month, and day) settings.
- The year can be set in the range of 2000 to 2099.
- The watch's built-in full automatic calendar makes allowances for different month lengths and leap years. Once you set the date, there should be no reason to change it except after you have the watch's battery replaced.
- The times for the Timekeeping Mode and all the city codes of the World Time Mode are calculated in accordance with each city's UTC offset.
- The UTC offset is a value that indicates the time difference between a reference point in Greenwich, England and the time zone where a city is located.

EN-54

- The letters "UTC" is the abbreviation for "Coordinated Universal Time", which is the world-wide scientific standard of timekeeping. It is based upon carefully maintained atomic (cesium) clocks that keep time accurately to within microseconds. Leap seconds are added or subtracted as necessary to keep UTC in sync with the Earth's rotation.

## 12-hour/24-hour Timekeeping Formats

The 12-hour/24-hour timekeeping format you select in the Timekeeping Mode is also applied in all other modes.

- With the 12-hour format, the **P** (PM) indicator appears on the display for times in the range of noon to 11:59 p.m. and the **A** (AM) indicator appears for times in the range of midnight to 11:59 a.m.
- With the 24-hour format, times are displayed in the range of 0:00 to 23:59, without any indicator.

EN-55

## Illumination

The display of the watch is illuminated for easy reading in the dark. In any mode (except when a setting screen is on the display), press (B) to illuminate the display for about three seconds.

### Illumination Precautions

- The LED that provides illumination loses power after very long use.
- Illumination may be hard to see when viewed under direct sunlight.
- Illumination turns off automatically whenever an alarm sounds or when time calibration reception is in progress.
- Frequent use of illumination runs down the battery.

EN-56

## Specifications

**Accuracy at normal temperature:** ±15 seconds a month (with no signal calibration)

**Timekeeping:** Hour, minutes, seconds, a.m.(A)/p.m.(P), month, day, day of the week (English, Spanish, French, Portuguese, German, Italian, Chinese, Russian, Japanese)

Time format: 12-hour and 24-hour

Calendar system: Full Auto calendar pre-programmed from the year 2000 to 2099

Other: Home City code (can be assigned one of 48 city codes); Standard Time/Daylight Saving Time (summer time); Month/Day display format

**Time Calibration Signal Reception:** Auto receive up to six times a day (remaining auto receives cancelled as soon as one is successful); Manual Receive; Last Signal screen; Standard time/summer time auto switching  
 Receivable Time Calibration Signals: Mainflingen, Germany (Call Sign: DCF77, Frequency: 77.5 kHz); Anthorn, England (Call Sign: MSF, Frequency: 60.0 kHz); Fukushima, Japan (Call Sign: JJY, Frequency: 40.0 kHz); Fukuoka/Saga, Japan (Call Sign: JJY, Frequency: 60.0 kHz); Fort Collins, Colorado, the United States (Call Sign: WWVB, Frequency: 60.0 kHz)

EN-57

**World Time:** 48 cities (29 time zones); UTC offset  
 Other: Standard Time/Daylight Saving Time (summer time)

### Timer:

Measuring unit: 1 second  
 Input range: 1 minute to 60 minutes (1-minute increments)

### Stopwatch:

Measuring unit: 1/100 second  
 Measuring capacity: 59' 59.99"  
 Measuring modes: Elapsed time, split time, two finishes

**Alarm:** Daily alarm; Hourly Time Signal

**Illumination:** LED light

**Other:** Auto Display function; Button operation tone on/off

EN-58

**Battery:** One lithium battery (Type: CR1620)

Approximately 3 years on type CR1620 (assuming alarm operation 10 seconds per day, one illumination operation 3 seconds per day and one signal reception 6 minutes per day)

*Frequent use of illumination can shorten battery operating time.*

Specifications are subject to change without notice.

EN-59



## Day of the Week List City Table

L-1

### Day of the Week List

	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
ENG	SUN	MON	TUE	WED	THU	FRI	SAT
ESP	DOM	LUN	MAR	MIE	JUE	VIE	SAB
FRA	DIM	LUN	MAR	MER	JEU	VEN	SAM
POR	DOM	SEG	TER	QUA	QUI	SEX	SAB
DEU	SON	MON	DIE	MIT	DON	FRE	SAM
ITA	DOM	LUN	MAR	MER	GIO	VEN	SAB
CHN	日	一	二	三	四	五	六
PYC	BC	PH	BT	CP	YT	PT	CB
JPN	日	月	火	水	木	金	土

L-2

### City Table

City Code	City	UTC Differential	Other major cities in same time zone
PPG	Pago Pago	-11	
HNL	Honolulu	-10	Papeete
ANC	Anchorage	-9	Nome
YVR	Vancouver	-8	San Francisco, Las Vegas, Seattle/Tacoma, Dawson City
LAX	Los Angeles		
YEA	Edmonton	-7	El Paso
DEN	Denver		
MEX	Mexico City		
YWG	Winnipeg	-6	Houston, Dallas/Fort Worth, New Orleans
CHI	Chicago		
MIA	Miami		
YTO	Toronto	-5	Montreal, Detroit, Boston, Panama City, Havana, Lima, Bogota
NYC	New York		
CCS	Caracas	-4	La Paz, Santiago, Port Of Spain
YHZ	Halifax		
YYT	St. Johns	-3.5	

L-3

City Code	City	UTC Differential	Other major cities in same time zone
RIO	Rio De Janeiro	-3	Sao Paulo, Buenos Aires, Brasilia, Montevideo
RAI	Praia	-1	
LIS	Lisbon	0	Dublin, Casablanca, Dakar, Abidjan
MAD	Madrid		
PAR	Paris		
ROM	Rome	+1	Milan, Amsterdam, Algiers, Hamburg, Frankfurt, Vienna
BER	Berlin		
STO	Stockholm		
ATH	Athens		
CAI	Cairo	+2	Helsinki, Istanbul, Beirut, Damascus, Cape Town
JRS	Jerusalem		
MOW	Moscow	+3	Kuwait, Riyadh, Aden, Addis Ababa, Nairobi
JED	Jeddah		
THR	Tehran	+3.5	Shiraz
DXB	Dubai	+4	Abu Dhabi, Muscat
KBL	Kabul	+4.5	
KHI	Karachi	+5	Male

L-4

City Code	City	UTC Differential	Other major cities in same time zone
DEL	Delhi	+5.5	Mumbai, Kolkata, Colombo
DAC	Dhaka	+6	
RGN	Yangon	+6.5	
BKK	Bangkok	+7	Jakarta, Phnom Penh, Hanoi, Vientiane
HKG	Hong Kong		
BJS	Beijing	+8	Singapore, Kuala Lumpur, Manila, Perth, Ulaanbaatar
TPE	Taipei		
SEL	Seoul	+9	Pyongyang
TYO	Tokyo		
ADL	Adelaide	+9.5	Darwin
GUM	Guam	+10	Melbourne, Rabaul
SYD	Sydney		
NOU	Noumea	+11	Port Vila
WLG	Wellington	+12	Christchurch, Nadi, Nauru Island

- Based on data as of January 2021.
- The rules governing global times (GMT differential and UTC offset) and summer time are determined by each individual country.

L-5